


1. Im Webbrowser (Internet Explorer, Safari, Firefox, Chrome, etc.) die Adresse: **http://192.168.0.1** eingeben.
2. Das Feld **Username leer lassen** und als **Password admin** eingeben.

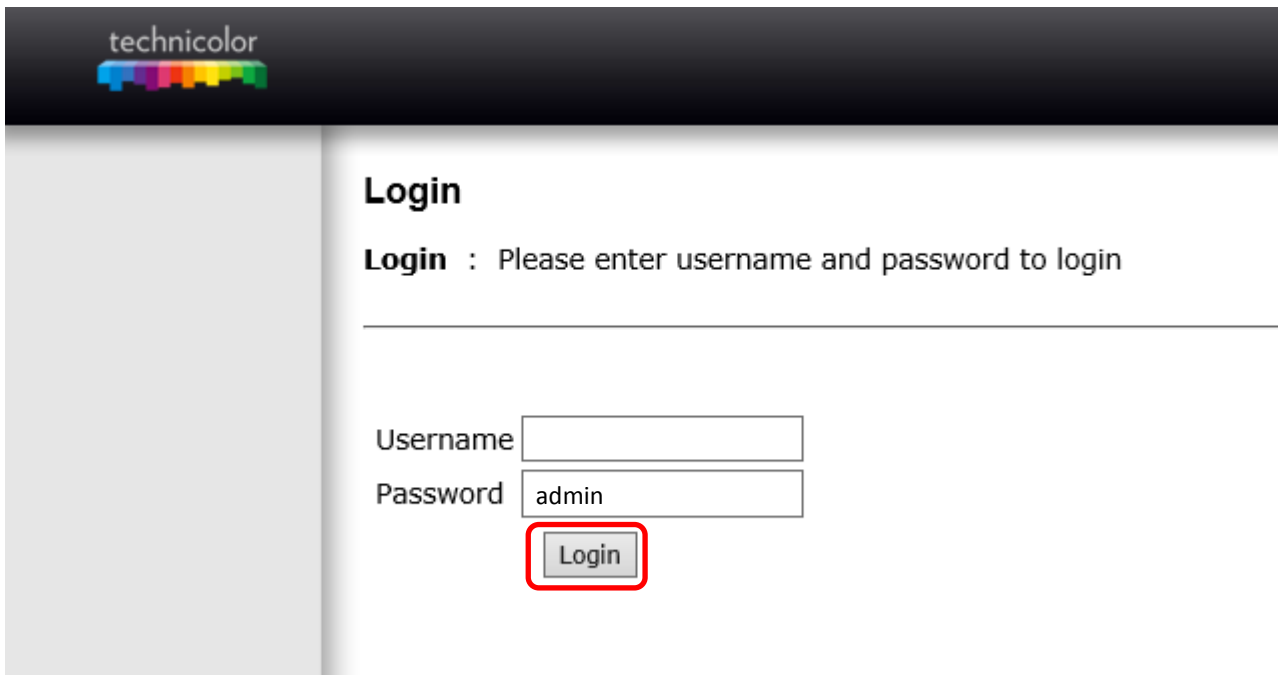


The screenshot shows the Technicolor login interface. At the top left is the Technicolor logo. The main heading is "Login". Below it, a message says "Login : Please enter username and password to login". There are two input fields: "Username" (empty) and "Password" (containing "admin"). A "Login" button is highlighted with a red box.

3. Unter **Wireless – Radio** das **Interface** von Disabled nach **Enabled** ändern und mit **Apply** abspeichern.



The screenshot shows the "Wireless" configuration page. The breadcrumb trail is "Status - Network - Advanced - Firewall - Parental Control - Wireless -". The left sidebar has "Wi-Fi 2.4G" selected. The main heading is "Wireless". Below it, a message says "802.11 Radio : This page allows configuration of the Wireless Radio pa". At the bottom, the "Interface" dropdown menu is set to "Enabled" and is highlighted with a red box.

4. Unter **Wireless – Primary Network** das **Primary Network** von Disabled nach **Enabled** ändern und mit **Apply** abspeichern.

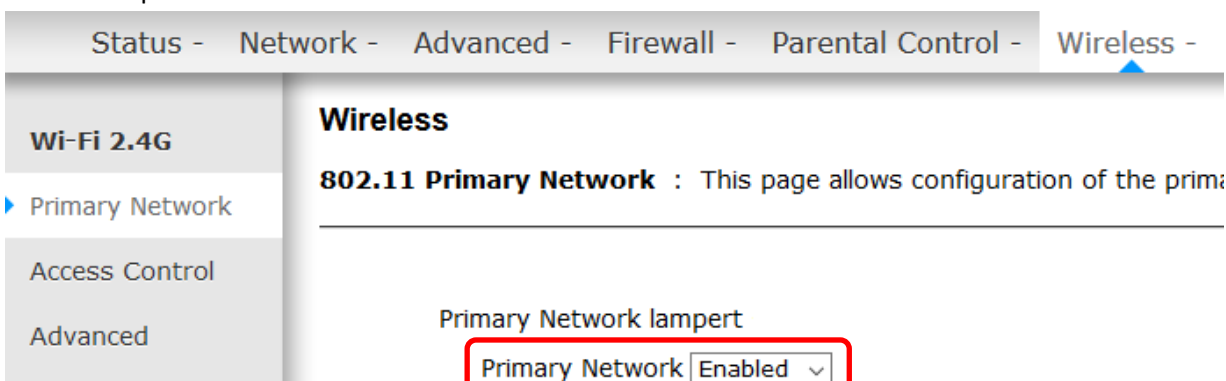

The screenshot shows the "Wireless" configuration page, specifically the "Primary Network" sub-section. The breadcrumb trail is "Status - Network - Advanced - Firewall - Parental Control - Wireless -". The left sidebar has "Wi-Fi 2.4G" selected, and "Primary Network" is highlighted. The main heading is "Wireless". Below it, a message says "802.11 Primary Network : This page allows configuration of the prima". Under the heading "Primary Network lampert", the "Primary Network" dropdown menu is set to "Enabled" and is highlighted with a red box.